



1 Hayward Industrial Dr, Clemmons, NC 27012  
 (336) 712-9900

<http://www.haywardflowcontrol.com/>

|                                |                     |
|--------------------------------|---------------------|
| Model                          | HLS211E-000         |
| Supply voltage                 | 10 to 35 volts d.c. |
| Output                         | 4 to 20 mA dc       |
| Accuracy                       | ±0.25% BSL          |
| Operating Temp. range          | 30° to 140° F       |
| Compensated Temp. range        | 30° to 85° F        |
| Temp. effects                  | ±1.5% TEB           |
| Electrical Connections:        |                     |
| Supply positive                | Red                 |
| Supply negative                | Black               |
| Ground                         | Green               |
| Shield (not connected to case) | Drain wire          |

Note: protect reference tube in the cable during and after installation.

### Installation and Use

During installation protect the end of the cable from water ingress. Do not remove the cover on the cable until the end is at the point of connection.

Support the cable so the weight of the cable and sensor are not left on a sharp edge. Use some form of cable grip or hanger.

Terminate the end of the cable in an enclosure with desiccant to provide dry air.

Do not push anything into the pressure port or if the sensor is open face against the sensor as damage could occur.

Maximum bend radius for FEP cable is 3½". If bent further than stated the reference tube in the cable will kink causing measurement errors.

